#### PLEASE FOLLOW INSTRUCTIONS FOR EASE OF ASSEMBLY

### Section 1 Partition Assembly

Section 2 Partition Assembly


(Similar to Section 1 Assembly)



1) Start on Flat Surface @ BEGIN HERE--SECTION 1 --WHITE SIDE UP



2) Fold First Panel UP--Panel Labeled "BOTTOM" is Held Down.

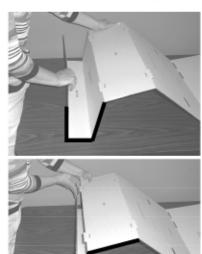

3) Fold Panel with Instruction #3 UP. Insert TAB A Into SLOT A and TAB B Into SLOT B.



4) With Panel Labeled "TOP" Up. Fold Panel with Instruction #4 DOWN. Locking bottom is not necessary at this time.



5) Fold Panel with Instruction #5 UP--Panel Labeled "BOTTOM" is Held Down, Insert TAB C Into SLOT C and TAB D Into SLOT D.



6) With Panel Labeled "TOP" up Fold Panel with Instruction #6 DOWN.



Flip Over BROWN SIDE UP--Insert remaining 4 UNMARKED TABS into adjacent SLOTS --Set Aside for Later Assembly--

, 12) With Panel Labeled "TOP" up

lip Section 2 Over

Brown Side Un

Flip Over BROWN SIDE UP--

Insert remaining 4 UNMARKED


--See Step C. to Join Sections--

TABS into adjacent SLOTS


Fold Panel with Instruction #12

DOWN.

13. Flip Both SECTIONS WHITE SIDE UP

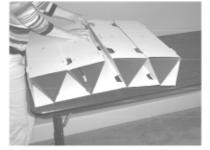


Join Sections by Inserting Tabs I,J,K & L Into Corresponding Slots I,J,K&L.

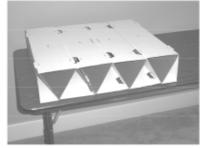


FINSHED TRUSS ASSEMBLY Set Aside for Later Insertion in Outer Box.

#### Construct Box & Insert Truss


Join Partitions -- Sections 1 & 2

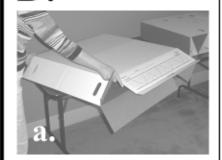

a) Unfold--Unfold and Expand Outer Box




b) Construct Bottom .--Fold Single Panel Flush with Bottom



c) Fold Panel with 2 Tabs Over Bottom. Insert End Tabs in Slots.



d) Construct Top--Fold 3 Single Panels to Inside Against Box Sides

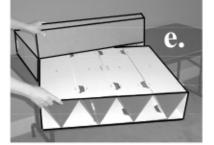

e) Insert Truss Partition into Box As Shown--WHITE SIDE TOWARD PRINTED TOP.

(Tabs Inside Box "Lock" in Place When Partition Inserted)



**A**DVANCED RGANIZING YSTEMS, INC.

(2 TrussFile25's Shown)


# TrussFile--Assembled

## **PARTS LIST**

1 ea. -- SECTION 1 Partition



20240901TRUSSFILE25-37INSTRUCTIONS




1 ea. -- SECTION 2 Partition

1 ea. -- Outer Box






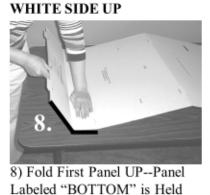


Down.

7) Start on Flat Surface @


BEGIN HERE--SECTION 2 --

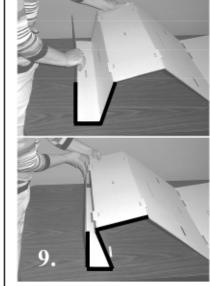

9) Fold Panel with Instruction #9 UP. Insert TAB E Into SLOT E and TAB F Into SLOT F.

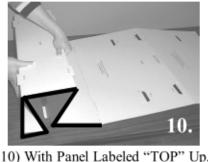

Fold Panel with Instruction #10 DOWN. Locking bottom is not necessary at this time.

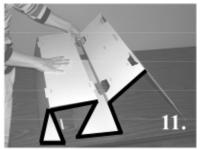

11) Fold Panel with Instruction #11 UP--Panel Labeled "BOTTOM" is Held Down. Insert TAB G Into SLOT G and TAB H Into SLOT H.